

Chapter Ten: Viewing the Interface List

Summary of Chapter:

- How to view the Interface List on your NetPilot

What you need:

- Knowledge of admin user account and valid password for your NetPilot.

Software Revision Required:

- Applicable to software revision 4.1.4 > NetPilots

Viewing the Interface List:

- Log on to the NetPilot as shown in Chapter One (b).
- Select the 'Maintenance' button on the left-hand side of the screen, then the 'Network' button at the top of the screen. Now scroll down and select the 'Interface list' link. (Both buttons and link are highlighted below)



- When you select this link you will be presented with a similar screen, which is shown below. This screen shows the active network interfaces and their status.

		Transmit	Receive
Packets		13754	8235
Bytes		3050288	1210126
Errors		0	0
Dropped		0	0
Overruns		0	0
Carrier		0	
CRC		0	0
Missed			
Frame abort		0	0
Collisions		0	
Multicast			0

		Transmit	Receive
Packets		19400	24696
Bytes		5067836	2761130
Errors		0	0
Dropped		0	0
Overruns		0	0
Carrier		0	
CRC		0	0
Missed			
Frame abort		0	0
Collisions		0	
Multicast			0

- You can select the 'Update' button to refresh the screen.
- Or you can select the 'Delete' button to reset all the counters back to zero
- Or select the 'Cancel' button to return to the previous screen