

Chapter Six (a): Entering a DNS Server

Summary of Chapter:

- How to enter a DNS Server on your NetPilot

What you need:

- Knowledge of admin user account and valid password for your NetPilot.
- The IP address of the DNS Server/s.

Software Revision Required:


- Applicable to software revision 4.1.4 > NetPilots




The NetPilot by default will use the Internet root name-servers automatically.

Entering a DNS Server:

- Log on to the NetPilot as shown in Chapter One (b).
- Select the 'Maintenance' button on the left-hand side of the screen, then the 'Network' button at the top of the screen and then select the 'DNS Servers' link. (Both buttons and link are highlighted below)

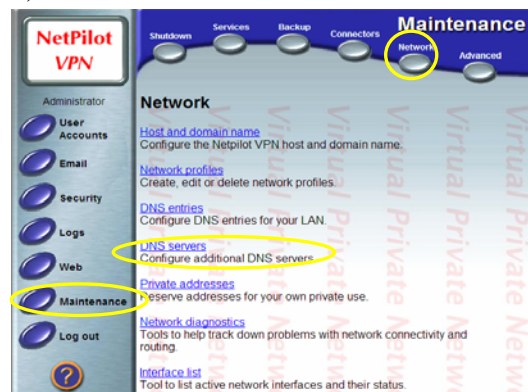

- Once you have selected the link you will be presented with this screen below, select the 'Add' button:

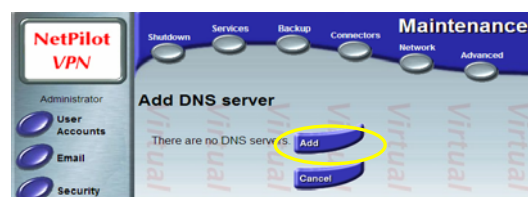

- You will be presented with the screen below. Enter the IP address of the DNS Server you would like to be queried first.



- Once you have entered the IP address, select 'OK' and then 'OK' again to confirm.